



Reference Design and How-To For

High Availability 2-Node XenServer Pool
Provides Full Functionality with Live Migration
Without External Shared Storage
for HA-Lizard

Version 1.2.14a



The information in this document and any product or service specifications referred to herein are subject to change without notice.

XenServer, XenCenter, Xen Cloud Platform and XCP are registered trademarks or trademarks of Citrix System, Inc and Xen.org DRBD and Distributed Replicated Block Device are registered trademarks or trademarks of LINBIT HA-Solutions GmbH

No part of this document may be reproduced, copied, altered or transmitted in any form or by any means, electronic, mechanical or otherwise for any purpose whatsoever, without the express written permission of the Copyright owner.

The information provided in this document is intended as a guide only and is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

No support is provided as part of the information in this document or any related software. Contact the project sponsor, Pulse Supply (www.pulsesupply.com), for details on support offerings.

Document Copyright © 2013 Pulse Supply All rights reserved.

IMPORTANT

- !!! iSCSI-HA and HA-Lizard are free software: you can redistribute it and/or modify
- !!! it under the terms of the GNU General Public License as published by
- !!! the Free Software Foundation, either version 3 of the License, or
- !!! (at your option) any later version.

!!!

- !!! iSCSI-HA and HA-Lizard are distributed in the hope that it will be useful,
- !!! but WITHOUT ANY WARRANTY; without even the implied warranty of
- !!! MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
- !!! GNU General Public License for more details.

!!!

- !!! You should have received a copy of the GNU General Public License
- !!! along with iSCSI-HA and HA-Lizard. If not, see http://www.gnu.org/licenses/.



Table of Contents

CSI-HA Add-on for XCP and XenServer	5
equired Software	7
IP Addresses and Host Names	8
Step 1 – Install XCP/XenServer	9
Step 2 – Create a Bonded Interface and Setup Pool Networking	9
Step 3 – Install DRBD	12
stalling With Included RPMs	12
stalling from Source (skip this step if using the included DRBD RPMs) See appendix for version spe	
Step 4 - Install HA-Lizard	13
Step 5 – Install iSCSI-HA	13
Step 6 – Install iSCSI Target	14
Step 7 – Initialize Packages	14
entify and Export iSCSI Backing Store	14
onfigure DRBD	15
odate LVM filters	16
onfigure iSCSI-HA	16
onfigure HA-Lizard	17
	CSI-HA Add-on for XCP and XenServer



•	Step 8 – Start Services	19
•	Step 9 – Create a new SR	19
3.	Managing the 2-Node Highly Available Cluster	20
•	Performance and System Capacity	20
	Resources and Capacity	20
	Performance	21
•	System Behavior	21
•	iscsi-cfg CLI Tool	22
	System Logging	22
	Viewing Configuration Parameters	22
	Viewing iSCSI-HA Status	22
•	Dealing with DRBD Split Brain	23
Mis	cellaneous	25
•	Managing Services	25
	DRBD	25
	TGTD	25
•	Dependencies and Compatibility	25
•	Important Considerations	26
•	Security and Ports	26
•	Support	26
4.	Appendix A – Installing DRBD from Source	27
•	XCP 1.6 and XenServer 6.1	27
•	XenServer 6.2	28




1. iSCSI-HA Add-on for XCP and XenServer

Purpose

iSCSI-HA is an add-on module for two node pools utilizing Xen Cloud Platform (XCP) or XenServer virtualization environments. It is intended to build highly available two-node clusters with local storage without limiting pool advanced functionality such as live migration.

Generally, this is achieved with separate iSCSI/SAN and Xen clusters which require a minimum of four physical servers and a pair of redundant Ethernet switches to reach an adequate level of fault tolerance. This may not be the most efficient use of hardware for small cluster applications. The goal of iSCSI-HA is to provide a simple framework for building compact, highly available pools utilizing XenServer or Xen Cloud Platform with just two physical hosts.

iSCSI-HA requires DRBD for block replication of storage and an iSCSI target framework such as TGT. A sample pool design/diagram is shown below for a highly available two node pool.

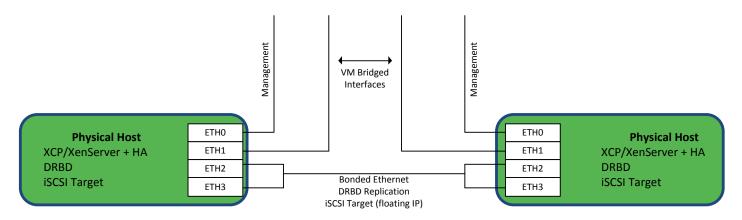

In this example, the DRBD and iSCSI interface is provided via direct attachment (no Ethernet switches) on a bonded Ethernet link. This approach greatly eliminates the possibility of a split brain scenario since there are no networking devices interconnecting the hosts in any way. Additionally, utilizing a bonded Ethernet link further eliminates the possibility of communication interruption between the hosts.

The iSCSI-HA add-on does not make any decisions or employ any logic relating to cluster management and the roles of the hosts. It relies on an external HA tool such as open source HA-Lizard which supports HA in a 2 node environment with fast switching of roles. The iSCSI-HA add-on relies on the external HA logic to ensure that a pool Master is always available. Based on this, iSCSI-HA will assign a single shared/floating IP address to the Master and promote DRBD resources to follow the floating IP. The slave host will be in a demoted state



at all times. In the event of a change of pool roles, iSCSI-HA will automatically detect the new roles and promote the new Master as the iSCSI target and demote the former Master to slave/standby mode.

Requirements

- XCP version 1.6 or XenServer version 6.1 or XenServer 6.2
- DRBD Version 8.3.x
- iSCSI target TGT
- Pool HA Open Source HA-Lizard

iSCSI HA features provided:

- VMs are free to run on the Master or Slave host
- Live Migration support
- Support for shared/floating virtual IP address to export iSCSI LUNs
- Automatic promoting of DRBD resources on pool Master
- Automatic demoting of DRBD resources on pool Slave
- Management of iSCSI service
- Extensive Logging capabilities to system log file
- Email alerting
- Dynamic iSCSI target selection auto-selects roles
- No changes to existing pool configuration required. All logic is external.
- Auto-Plug XenServer SRs that fail to connect on host boot
- Auto-Replug XenServer SRs that are not properly connected
- **Minimal dependencies** does not compromise pool stability or introduce complex SW packages. Designed to work with the resident packages on a standard XCP/XenServer host with the addition of DRBD and TGT.

Development is well tested and based on:

- Xen Cloud Platform (XCP) version 1.6
- XenServer version 6.1
- XenServer version 6.2
- HA-Lizard version 1.6.41.4
- DRBD 8.3
- TGT iSCSI Target



2. Create a 2-Node Highly Available Cluster

Assumptions

Server Hardware

Start with two identical servers with 4 LAN interfaces and two disk partitions. This How-To is based on HP DL-360 servers with HW RAID 1+0 and four disks.

- Disks 1+2 create the first RAID 1+0 array and will be used to install XCP/XenServer
- Disks 3+4 create the second RAID 1+0 array and will be used as the iSCSI backing store

Ethernet Switch

A managed Ethernet switch is used to connect the server management interfaces. The switch management IP must be reachable by the management interfaces of the servers.

Required Software

- iSCSI-HA version 1.2x (or later)
- XenServer 6.1 or XenServer 6.2 or Xen Cloud Platform (XCP) 1.6
- Logic to ensure there is always a pool master.
 HA-Lizard 1.41.4 or newer
- DRBD 8.3x for iSCSI replication
- TGT iSCSI target

IMPORTANT – Unless otherwise specified – all steps should be performed on both hosts



• IP Addresses and Host Names

The following IP addresses and host names are used in this How-To. Adapt the settings presented to match your environment.

Node 1 hostname	XCP1
Node 2 hostname	XCP2
Node 1 XenServer Management IP	192.168.1.241
Node 2 XenServer Management IP	192.168.1.242
Node 1 DRBD/iSCSI IP Address	10.10.10.1
Node 2 DRBD/iSCSI IP Address	10.10.10.2
Shared (floating) iSCSI Address	10.10.10.3
IP Address of Ethernet Switch on Management Network or some other reliable IP that is accessed	192.168.1.253
by traversing the management network	
iSCSI/DRBD Backing Device	/dev/cciss/c0d1
DRBD Resource Name	iscsi1
DRBD Local Resource	/dev/drbd1




• Step 1 - Install XCP/XenServer

- Install XCP or XenServer on two identical hosts with a minimum four Ethernet interfaces and 2 Disks or Disk partitions. Install XenServer/XCP on the first partition - leave the second disk/partition to be used later as iSCSI storage.
- When installing select Ethernet 0 as the management interface for each host.
- Connect to one of the hosts with XenCenter and create a new pool with the two hosts.


Step 2 – Create a Bonded Interface and Setup Pool Networking

The third and fourth network interfaces ("NIC2 and NIC3") will be used to create a bonded network as depicted below. This will serve as both the replication link and the iSCSI interface.

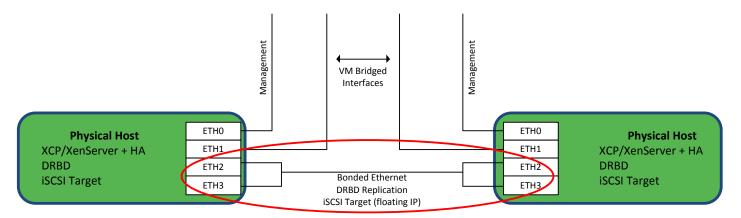


- From XenCenter – Select the "Networking" tab for the pool and "Add Network"

Select "Bonded Network"

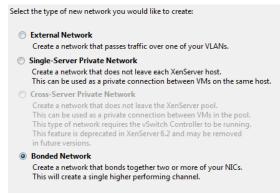




- Select NIC 2 and NIC 3 and then "Finish"

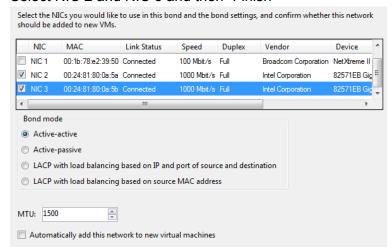


- From within XenCenter – assign an IP address for the bond on each host. In this example we use 10.10.10.1 and 10.10.10.2. Since the replication/iSCSI network is completely closed, it is not necessary to configure a default gateway for the interface.

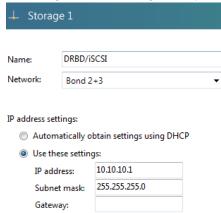



- The final pool network configuration should look something like this.

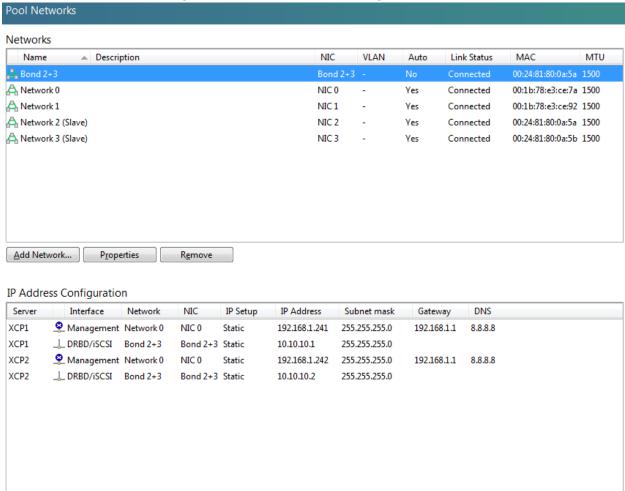

- Check each of the network properties and ensure that "Automatically add this network to new virtual machines" is only selected for Network 1 (assuming you will not use the management interface for VM interfaces).
- Update firewall files to allow DRBD and iSCSI network traffic. The following line can be added to the iptables firewall script just above the "REJECT" line.
 - "-A RH-Firewall-1-INPUT -s 10.10.10.0/24 -j ACCEPT"

vi /etc/sysconfig/iptables Insert "-A RH-Firewall-1-INPUT -s 10.10.10.0/24 -j ACCEPT" save/exit — then restart FW



service iptables restart

```
Manual customization of this file is not recommended.
INPUT ACCEPT [0:0]
FORWARD ACCEPT [0:0]
OUTPUT ACCEPT [0:0]
RH-Firewall-1-INPUT - [0:0]
A INPUT -j RH-Firewall-1-INPUT
A FORWARD -j RH-Firewall-1-INPUT
A RH-Firewall-1-INPUT -i lo -j ACCEPT
A RH-Firewall-1-INPUT -p icmp --icmp-type any -j ACCEPT
A RH-Firewall-1-INPUT -p 50 -j ACCEPT
A RH-Firewall-1-INPUT -p 51 -j ACCEPT
A RH-Firewall-1-INPUT -p udp --dport 5353 -d 224.0.0.251 -j ACCEPT
A RH-Firewall-1-INPUT -p udp -m udp --dport 631 -j ACCEPT
A RH-Firewall-1-INPUT -p tcp -m tcp --dport 631 -j ACCEPT
A RH-Firewall-1-INPUT -p udp -m udp --dport 67 --in-interface xenapi -j ACCEPT
A RH-Firewall-1-INPUT -m state --state ESTABLISHED, RELATED -j ACCEPT
A RH-Firewall-1-INPUT -m state --state NEW -m udp -p udp --dport 694 -j ACCEPT
A RH-Firewall-1-INPUT -m state --state NEW -m tcp -p tcp --dport 22 -j ACCEPT
-A RH-Firewall-1-INPUT -m state --state NEW -m tcp -p tcp --dport 80 -j ACCEPT
-A RH-Firewall-1-INPUT -m state --state NEW -m tcp -p tcp --dport 443 -j ACCEPT
-A RH-Firewall-1-INPUT -s 10.10.10.0/24 -j ACCEPT
-A RH-Firewall-1-INPUT
                                       -reject-with icmp-host-prohibited
```

Step 3 – Install DRBD

DRBD RPMs are included in the iscsi-ha source package. These can be used only if the kernel version
of your XCP/XenServer installation exactly matches the version used to build the RPMs. If using a
different kernel version, it will be necessary to build RPMs from source for your kernel. The included
RPMs will work with XCP 1.6, XenServer 6.1 and XenServer 6.2.

Installing With Included RPMs

- Extract the iscsi-ha source package in a temporary location tar -zxvf iscsi-ha*.tgz
- Move into the RPM directory cd /iscsi-ha*/RPM
- Make a note of the kernel version used to prepare the provided RPMs
 ls -l
- Check Your Kernel Version uname -a
- Move into the directory matching your kernel cd <kernel version>
- Install the required RPMs for the matching kernel (adapt below to match your version)
 rpm -ivh drbd-utils-8.3.15-1.i386.rpm



```
rpm -ivh drbd-km-2.6.32*.rpm
rpm -ivh drbd-bash-completion-8.3.15-1.i386.rpm
rpm -ivh drbd-heartbeat-8.3.15-1.i386.rpm
rpm -ivh drbd-pacemaker-8.3.15-1.i386.rpm
rpm -ivh drbd-udev-8.3.15-1.i386.rpm
rpm -ivh drbd-xen-8.3.15-1.i386.rpm
rpm -ivh drbd-8.3.15-1.i386.rpm
```

 Ensure that DRBD does not start automatically on boot. iSCSI-HA will be responsible for starting the service.

```
chkconfig drbd off
```

Installing from Source (skip this step if using the included DRBD RPMs) See appendix for version specific instruction on installing from source.

Step 4 - Install HA-Lizard

- Copy the source tarball into a temporary location (ex. /tmp/)
- Extract its contents and move into the extracted folder tar -zxvf ha-lizard-1.6.4*.tgz
- Move into the "scripts" folder
 cd ha-lizard-1.6.4*/scripts
- Run the installer
 ./install

The installer will check if sendmail and mailx packages are installed on the server. These are only required for email alerts. Skip the installation of these packages if email alerting is not required.

The installer will install the default pool parameter set in the XAPI database. This step is only required on a single host.

Once the installer is completed, HA and watchdog services will be started. Although these services are running, HA is disabled for the pool by default. HA can then be enabled via the command line tool <ha-cfg> once installation of additional packages is completed.

Step 5 – Install iSCSI-HA

Copy the source tarball into a temporary location (ex. /tmp/)



- Extract its contents and move into the extracted folder tar -zxvf iscsi-ha-<version>.tgz
- Move into the "scripts" folder
 cd iscsi-ha-<version>/scripts
- Run the installer./install
- Temporarily stop the service service iscsi-ha stop -w

The installer will check if sendmail and mailx packages are installed on the server. These are only required for email alerts. Skip the installation of these packages if email alerting is not desired.

• Step 6 - Install iSCSI Target

- Install the scsi-target-utils package
 yum --enablerepo=base install scsi-target-utils
- Ensure that TGT does not start automatically on boot. iSCSI-HA will be responsible for starting the service.

chkconfig tgtd off

Step 7 – Initialize Packages

Identify and Export iSCSI Backing Store

- Use fdisk to find the name of the disk partition to be used for the iSCSI backing store. In this example, the device path is "/dev/cciss/c0d1"

fdisk -l

```
[root@XCF2 tmp]  # fdisk -1

WARNING: GFT (GUID Partition Table) detected on '/dev/cciss/c0d0'! The util fdisk doesn't support GFT. Use GNU Parted.

Disk /dev/cciss/c0d0: 146.7 GB, 146778685440 bytes
256 heads, 63 sectors/track, 17775 cylinders

Units = cylinders of 16128 * 512 = 8257536 bytes

Device Boot Start End Blocks Id System
/dev/cciss/c0d0p1 * 1 17776 143338559+ ee EFI GPT

Disk /dev/cciss/c0d01 450.0 GB, 45006465138 bytes
255 heads, 73 *ectors/track, 107724 cylinders
Units = cylinders of 9160 * 512 = 4177920 bytes

Disk /dev/cciss/c0d1 doesn't contain a valid partition table
```

- DRBD will create a resource replicating this block device (/dev/cciss/c0d1). We will use DRBD resource name "/dev/drbd1" in the iSCSI configuration. Modify the iSCSI target configuration file to export "/dev/drbd1". (if using multiple partitions, this can be adapted to suit your environment). Set the scsi_id and scsi_sn to suit your needs. These can be omitted if desired.



vi /etc/tgt/targets.conf (or use your preferred editor)

Add this section to the configuration file

Configure DRBD

- Backup current DRBD configuration file in case you need it.
 mv /etc/drbd.conf /etc/drbd.conf.backup
- Create/Edit new /etc/drbd.conf with the settings below (adapt hostname, disk and IP addresses to your environment)

vi /etc/drbd.conf

- Insert the following configuration parameters

```
global { usage-count no; }
common { syncer { rate 100M; } }
resource iscsi1 {
        protocol C;
        net {
                after-sb-Opri discard-zero-changes;
                after-sb-1pri consensus;
                cram-hmac-alg sha1;
                shared-secret "PUTyourSECREThere";
  on XCP1 {
    device
              /dev/drbd1;
    disk
              /dev/cciss/c0d1;
    address
              10.10.10.1:7789;
    meta-disk internal;
  on XCP2 {
    device
              /dev/drbd1;
    disk
              /dev/cciss/c0d1;
    address
              10.10.10.2:7789;
    meta-disk internal;
  }
}
```



- Initialize the Disks
 dd if=/dev/zero bs=1M count=1 of=/dev/cciss/c0d1
 drbdadm create-md iscsi1
- Start the DRBD service service drbd start

```
drbdadm attach iscsi1
drbdadm syncer iscsi1
drbdadm connect iscsi1
```

** ON PRIMARY DATA SOURCE ONLY **:

drbdadm -- --overwrite-data-of-peer primary iscsil

Update LVM filters

LVM filters must be updated to prevent VG/LV metadata from being read from both the backing block device and the DRBD device. VG/LV data must ONLY be read from /dev/iscsi. This step is mandatory for proper operation.

- Edit /etc/lvm/lvm.conf and update filter to look something like this to reject reading LVM headers locally.
 vi /etc/lvm/lvm.conf
- Update filter to (restrict local backing device and drbd device adjust to your environment)
 ** Important LVM Headers for iSCSI-HA storage must only be ready from /dev/iscsi **
 "filter = ["r|/dev/xvd.|", "r|/dev/VG_Xen.*/*|", "r|/dev/cciss/c0d1|", "r|/dev/drbd.*|"]"
- Set -> "write cache state=0"
- When done erase the LVM cache to ensure cached data is not read by LVM.
 rm –f /etc/lvm/cache/.cache && vgscan

Configure iSCSI-HA

- Edit /etc/iscsi-ha/iscsi-ha.conf vi /etc/iscsi-ha/iscsi-ha.conf
- Make the following configuration changes and save.

```
DRBD_RESOURCES=iscsi1
ISCSI_TARGET_SERVICE=/etc/init.d/tgtd
DRBD_VIRTUAL_IP=10.10.10.3
```



```
DRBD_VIRTUAL_MASK=255.255.255.0

DRBD_INTERFACE=xapi0

(if unsure of the DRBD interface try "ip addr show | grep -B 2 10.10.10" where 10.10.10 are the first 3 octets of the bond IP)

MONITOR_MAX_STARTS=5

MONITOR_DELAY=10

MONITOR_KILLALL=1

MONITOR_SCANRATE=5

ENABLE_LOGGING=1

MAIL_ON=1

MAIL_SUBJECT="SYSTEM ALERT - FROM HOST: $HOSTNAME"

MAIL_FROM="root@localhost"

MAIL_TO='YOUR_EMAIL_ADDRESS_HERE'
```

Configure HA-Lizard

HA-Lizard can be completely configured from the command line. This can be done on either of the two hosts as changes are globally set for all hosts within the pool. The following settings are ideal for use with iSCSI-HA which requires fast detection of host failures and switching of roles. Fencing should be used. The configuration below uses POOL fencing which removes a failed host from the pool, but will not power-off an unresponsive host. ILO or custom fencing can be used if required. Since this design does not allow primary/primary support for DRBD, there is a low likelihood of data corruption should the pool become split. Additionally, the DRBD/iSCSI link is a directly connected Ethernet bond between the two hosts with no switches in between. iSCSI-HA logic utilizes this link to determine which host should act as the iSCSI storage, further reducing the possibility of a split pool. (the below settings assume you are starting with default HA-Lizard settings.. only the following changes from default are required).

```
ha-cfg set FENCE_ENABLED 1
ha-cfg set FENCE_HEURISTICS_IPS 192.168.1.253
ha-cfg set FENCE_MIN_HOSTS 2
ha-cfg set FENCE_QUORUM_REQUIRED 1
ha-cfg set FENCE_USE_IP_HEURISTICS 1
ha-cfg set MAIL_TO <your alert email address>
ha-cfg set MAIL_FROM <your from email address>
ha-cfg set MONITOR_DELAY 15
ha-cfg set XAPI_COUNT 2
ha-cfg set XAPI_DELAY 10
```

The final HA-Lizard configuration should look like the example below. Use "ha-cfg get" to view the configuration.



MAIL_FROM="root@localhost" DISABLED_VAPPS=() MAIL_ON=1
MAIL_SUBJECT="SYSTEM_ALERT-FROM_HOST:\$HOSTNAME" ENABLE_LOGGING=1 FENCE_ACTION=stop FENCE_ENABLED=1 MAIL TO=yourmail@somedomain.com MONITOR_DELAY=15 FENCE_FILE_LOC=/etc/ha-lizard/fence FENCE HA ONFAIL=1 MONITOR KILLALL=1 FENCE HEURISTICS IPS=192.168.1.253 MONITOR MAX STARTS=20 MONITOR_SCANRATE=10 FENCE_HOST_FORGET=0 FENCE_IPADDRESS= FENCE_METHOD=POOL FENCE_MIN_HOSTS=2 OP MODE=2 PROMOTE SLAVE=1 SLAVE HA=1 FENCE PASSWD= SLAVE_VM_STAT=0 FENCE_QUORUM_REQUIRED=1 XAPI COUNT=2 FENCE REBOOT LONE HOST=0 XAPI DELAY=10 FENCE_USE_IP_HEURISTICS=1 XC FIELD NAME='ha-lizard-enabled' GLOBAL VM HA=1 XE_TIMEOUT=10



Step 8 – Start Services


- HA-Lizard should already be running – check with "service ha-lizard-status -w". Start the service if it is not running

service ha-lizard start -w

- Enable HA from either of the hosts in the pool ha-cfg status (type "yes" when prompted)
- Start iSCSI-HA chkconfig iscsi-ha on service iscsi-ha start -w

Step 9 – Create a new SR

From within XenCenter, create a new storage repository of type – iSCSI with a target of the shared/floating IP of 10.10.10.3

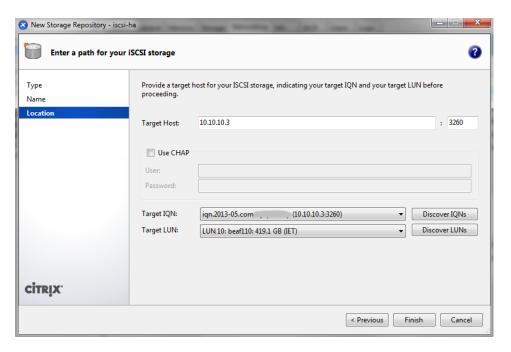



3. Managing the 2-Node Highly Available Cluster

With the installation steps completed, the cluster can now be used to create new VMs. All disk writes will be duplicated across the bonded Ethernet link from the master to the slave, thus each logical volume created by XenServer will be duplicated across the hosts. Read/Write access to the storage will only be on a single IP address which is managed by iSCSI-HA, regardless of which host is the current pool master. The overall design of the compact 2-node cluster is intended to be more resilient than traditional architectures with dual RAID levels and fewer network elements.

- Each host employs HW RAID (if configured to do so)
- Storage is duplicated with SW RAID (DRBD)
- Recovery and failover is simplified in a two node architecture
- Low likelihood of a split pool with mechanisms to prevent the possibility
- Modern server architecture can be very dense allowing for a robust, high capacity virtualization environment with minimal HW components.

Performance and System Capacity

Resources and Capacity

Ideally, the completed cluster should be engineered to handle the full load of all VMs on a single host in the event of a failure. This requires that adequate CPU resources be made available to run the entire VM load on a single host, and, more importantly that enough RAM is available on each of the hosts to run all of the VMs. If the cluster is unable to provide enough resources to run the full VM load on a single host then it will be necessary to omit some of the VMs from HA. There are several ways of achieving this which are well documented in the HA-Lizard administration manual. Below is a short summary of considerations:

- Select the least critical VMs to be omitted from HA and assign to a specific host.
- Use HA-Lizard OP-MODE 1 and assign non-HA VMs to an excluded appliance.
- Use HA-Lizard OP-MODE 2 and set GLOBAL_VM_HA=0. The use the CLI tool to set/unset HA for each VM within the pool.
- If the pool has a considerable number of VMs, consider setting HA-Lizard OP-MODE to 1 which
 manages appliances rather than directly managing VMs. This give the added benefit of configuring a
 delay between VM starts.



Performance

System performance is dependent on a variety of factors, including:

- Server I/O subsystem performance.
- Disk Speeds
- Replication link speed

VM performance on either the Master or Slave host should be the same with the exception of storage read/write speeds. The performance on the Master should be roughly the same as Direct Attached Storage (DAS). Storage read/write performance from the Slave can be roughly ½ of the Master's performance. This is due to VMs on a Slave host communicating with storage on the Master while the Master simultaneously writes any changes to the Slave's replicated storage. In this scenario, the replication link is roughly split in half between the VM accessing the storage and the storage replication.

The following write performance was measured on a system built with the default settings presented in this document:

Write Speed – VM on Master: 138 MB/s Write Speed – VM on Slave: 62.6 MB/s

Write Speed – VM on XenServer using local 10K disk (for comparison): 119 MB/s

In summation, with proper capacity and load planning, the entire load can be run on the Master host while achieving DAS performance.

System Behavior

The completed pool/cluster provides a high degree of automated HA protection for both the hosts and all VMs within the pool. Given that only 2 hosts are used, the following failure/recovery scenarios are possible:

- 1) Master Failure: A master host failure will be detected in 15 seconds or less and recovered (slave promotes itself to master) in less than one minute. Any VMs that were running on the slave will continue to operate. They will experience a short disruption in backing disk connectivity (~ 60 seconds) and will otherwise be unaffected. Any VMs that were running on the failed master will be restarted on the new master (former slave) about 60 seconds after the failure.
- 2) Slave Failure: A slave failure will be detected in 15 seconds or less and will be removed from the pool in less than one minute. Any VMs that were running on the Master will be completely unaffected. VMs that were running on the failed slave will be restarted on the master roughly ~60 seconds after the failure.



The timing of the recovery logic can be customized to be more aggressive, offering significantly faster recovery or more conservative which would require more time to recover services. The settings used in this how-to provide full recovery in about one minute.

iscsi-cfg CLI Tool

A command line tool is provided as part of the iscsi-ha package. The tool can be called with:

```
iscsi-cfg
```

A sample output with command line monitoring arguments is shown below:

```
ISCSI-HA Monitoring Tool: Add-on for HA-Lizard: XenServer/XCP High Availability
Usage: iscsi-cfg <action>

Available actions:
<log>: Watch iSCSI-HA log file output in real time
<get>: Lists all iSCSI-HA configuration parameters
<status>: Displays the iSCSI-HA operational status
```

System Logging

A live view of the system logs generated by iSCSI-HA is available by invoking:

iscsi-ha log

Viewing Configuration Parameters

A listing of configuation paramters for the local host is available by invoking:

iscsi-ga get

Viewing iSCSI-HA Status

The iSCSI-HA service is responsible for managing:

- DRBD Running State
- DRBD Resource State (primary/secondary)
- iSCSI Target (TGT) Running State
- Floating IP Address

The status of each of these can be viewed in real time by invoking:

iscsi-ha status

The information displayed will be relative to the role of the host within the XenServer pool. Below examples show the output from both the pool Master and Slave nodes.



```
iSCSI-HA Status: Version: 1.2.11 iscsi-ha (pid 19960 19953) is running...
Last Updated: Sun Jul 14 20:55:31 EDT 2013

HOST ROLE: SLAVE
VIRTUAL IP: 10.10.10.3 is not local
ISCSI TARGET: tgtd is stopped
DRBD ROLE: iscsi1=Secondary
```

The status will not be displayed if the iSCSI-HA service is stopped or a system failure is preventing it from running correctly. In this case, the status output will look like the below example.

Dealing with DRBD Split Brain

Certain reboot scenarios and unexpected host restarts can cause DRBD to detect split brain which will prevent the DRBD resources from synchronizing. This scenario will likely not impact the operation of the pool since the Master node will still manage DRBD locally and ensure it is in the Primary state. Recovery from split brain should be handled cautiously as storage for one of the nodes will need to be overwritten. The following steps offer a general guideline for recovery.

- First, ensure that the XenServer pool is not split. Although highly unlikely with the 2-node architecture, it is possible that both hosts have entered into the Master role. If this has occurred and VMs on both hosts are not running in duplicate, then it will be necessary to manually merge the known good Logical Volumes from both hosts onto the new Master. Once done, the Master nodes storage can be resynchronized with the Slave. All HA processes should be stopped during this operation.
- If it is clear which node holds the current data, the following steps should clear up the DRBD split brain.



 On the node that is to lose its data by synchronizing with the good node (where iscsi1 is the DRBD resource name):

```
drbdadm secondary iscsil
drbdadm -- --discard-my-data connect iscsil
```

 On the host that is the survivor with known good data: drbdadm connect iscsi1



Miscellaneous

Managing Services

DRBD

It is best to ensure that the DRBD service is **NOT**-automatically started on each host when the system boots as this can prevent a host from fully booting in the event that both hosts are rebooted and only a single host returns to operating status. This is due to DRBD waiting for its peer to connect indefinitely which can prevent services from starting during system boot.

chkconfig drbd off

iSCSI-HA will automatically start DRBD after all system services have safely started thus eliminating the possibility of a hang during boot time. The iSCSI-HA process will always acts as a watchdog for DRBD ensuring that the service is always on.

TGTD

The TGTD iSCSI target should be managed by iSCSI-HA as the service should only be running on one of the hosts. For proper operation it is necessary to instruct the host not to automatically start TGTD. This can be done with:

chkconfig tgtd off

Dependencies and Compatibility

When installing iSCSI-HA onto a default Centos based DomO (XCP or XenServer), all the required tools needed to run iSCSI-HA are resident on the system with the exception of:

- DRBD version 8.3 required. RPMs are provided in /etc/iscsi-ha/RPM/
- TGT iSCSI Target (can be installed with "yum –enablerepo=base install scsi-target-utils")

Package is compatible with XCP version 1.6 XenServer version 6.1 and XenServer version 6.2. Prior releases may work but have not been tested.

For custom DomO installations, ensure the following tools are available:

xapi and xe toolstack /bin/cat /bin/awk /bin/echo /sbin/drbdadm



/bin/logger /sbin/ifconfig hostname /bin/mail /sbin/ip /sbin/arping

Important Considerations

- iSCSI-HA requires that a node within the 2-node pool *Always* is the pool master. If a pool failure results in a situation with no master, the iSCSI target will be unavailable and VMs cannot operate. To ensure that a master is always available HA logic should be employed in the pool.
- In the event that there is no pool master, manual intervention is required to expose the iSCSI target.
- iSCSI-HA only supports 2-node pools. It can be adapted to larger pools with some work.
- AVOID Upgrading XenServer after completing this how-to installed packages and configurations will likely be lost as part of the upgrade process (eg. Upgrading from version 6.1 to 6.2).

Security and Ports

- iscsi port 3260 used as the listen port for the iscsi target
- ICMP (ping) is used to check whether the virtual IP is live
- DRBD ensure that the port numbers specified in drbd.conf are open

Support

- Post a question on the support forum http://www.halizard.com/index.php/forum
- Contact the project sponsor for paid support options http://www.pulsesupply.com



4. Appendix A – Installing DRBD from Source

XCP 1.6 and XenServer 6.1

- Install the required packages for building DRBD from source
 yum --enablerepo=base install gcc flex rpm-build redhat-rpm-config make
 libxslt -y
- Get the kernel-xen-devel rpm from XCP (or XenServer) binpkg.iso image and install rpm -ivh kernel-xen-devel-2.6.32.43-0.4.1.xs1.6.10.734.170748.i686.rpm

```
    Create RPMs
```

```
mkdir /drbd/
cd /drbd/
wget http://oss.linbit.com/drbd/8.3/drbd-8.3.15.tar.gz
tar zxvf drbd-8.3.15-1.tar.gz
cd drbd-8.3.15-1
./configure --prefix=/usr --localstatedir=/var --sysconfdir=/etc --with-km
make tgz drbd.spec drbd-km.spec
cp drbd*.tar.gz `rpm -E %_sourcedir`
rpmbuild -bb drbd.spec
rpmbuild -bb drbd-km.spec
cd /usr/src/redhat/RPMS/i386/
```

- Install the required RPMs

```
rpm -ivh drbd-utils-8.3.15-1.i386.rpm
rpm -ivh drbd-km-2.6.32.43*.rpm
rpm -ivh drbd-bash-completion-8.3.15-1.i386.rpm
rpm -ivh drbd-heartbeat-8.3.15-1.i386.rpm
rpm -ivh drbd-pacemaker-8.3.15-1.i386.rpm
rpm -ivh drbd-udev-8.3.15-1.i386.rpm
rpm -ivh drbd-xen-8.3.15-1.i386.rpm
rpm -ivh drbd-xen-8.3.15-1.i386.rpm
```



XenServer 6.2

- Mount the binpkg.iso image and move into the cd /mnt/domain0/RPMS/i386/ folder. Install the following RPMs

```
rpm -ivh kernel-xen-devel-2.6.32.43-0.4.1.xs1.8.0.835.170778.i686.rpm rpm -ivh kernel-headers-2.6.32.43-0.4.1.xs1.8.0.835.170778.i686.rpm rpm -ivh glibc-headers-2.5-107.el5 9.1.i386.rpm
```

Install the required packages for building DRBD from source

```
yum --enablerepo=base install gcc flex rpm-build redhat-rpm-config make libxslt -y
```

Create RPMs

```
mkdir /drbd/
cd /drbd/
wget http://oss.linbit.com/drbd/8.3/drbd-8.3.15.tar.gz
tar zxvf drbd-8.3.15-1.tar.gz
cd drbd-8.3.15-1
./configure --prefix=/usr --localstatedir=/var --sysconfdir=/etc --with-km
make tgz drbd.spec drbd-km.spec
cp drbd*.tar.gz `rpm -E %_sourcedir`
rpmbuild -bb drbd.spec
rpmbuild -bb drbd-km.spec
cd /usr/src/redhat/RPMS/i386/
```

Install the required RPMs

```
rpm -ivh drbd-utils-8.3.15-1.i386.rpm
rpm -ivh drbd-km-2.6.32.43*.rpm
rpm -ivh drbd-bash-completion-8.3.15-1.i386.rpm
rpm -ivh drbd-heartbeat-8.3.15-1.i386.rpm
rpm -ivh drbd-pacemaker-8.3.15-1.i386.rpm
rpm -ivh drbd-udev-8.3.15-1.i386.rpm
rpm -ivh drbd-xen-8.3.15-1.i386.rpm
rpm -ivh drbd-xen-8.3.15-1.i386.rpm
```